

SL 19

Spare Parts Photo Book


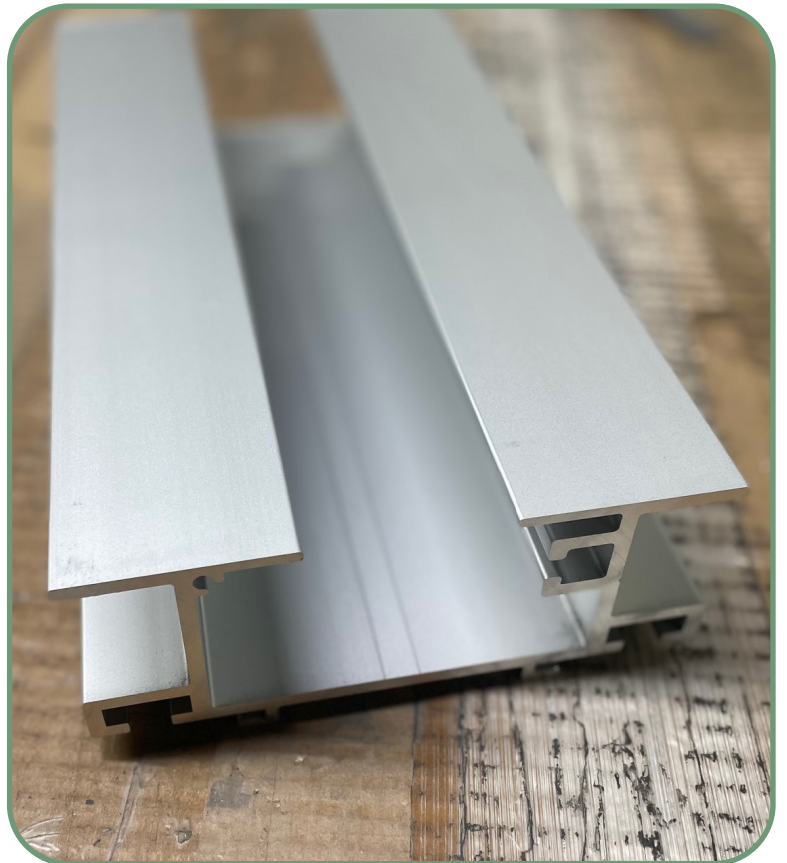


Table of Contents


54018	- Charger, Smart 24VDC	3
54015	- PCB, AMI Main Control Board	3
54005	- Switch, Plunger, 1DM1	3
58012	- Assy, Limit Cam	3
54011	- Battery, 12V 5AH	3
74034	- RF TX Fob, 2 Button, Gen 2	3
74033	- RF Remote Receiver, Gen 2	3
54013	- Switch, Rocker	3
56005	- Strip, Charge Finger (SL14)	4
56006	- Strip, Charge Contact (SL14)	4
56035	- Track Extrusion	4
56038	- Slotted Gear Rack, 60"	4
58083	- Assy, Track Splice Bar (2 per splice)	4
91040	- Pin, Driv-Lok, 187x1	5 (1 per splice) 4
55016	- Cover, Track Top	4
58079	- Assy, Track End Cap SL19	4
58064	- Assy, Track Bracket	5
50029	- 14x2 00-WL-HF-ZP (track bracket wood lags)	5
54051	- Hrns, Travel Cable, 15' (prior to 3 1 21)	5
58125	- Assy-Sub, Charge Shoe	5
54023	- Harness, Charger	5
58126	- Assy-Sub, Charge Strip (must specify top or bottom)	5
56036	- Guide Block	5
50002	- Washer, 3/4-1 25 x 07 FL-NY (guide block shims)	5
94002	- Switch, V7, No Actuator (overspeed switch, no arm)	6
94001	- Switch, Sim Roll, V7-1B17D8-263 (seat swivel/final, has arm)	6
54031	- LED, Diagnostic	6
54033	- PCB, AMI Main Control Board, OUTDOOR	6
56033	- Cover, Stairlift Outdoor Grey	6
54002	- Circuit Breaker, 15A	6
58082	- Sub, Motor/Pinion	6
59051	- Cargo Tray	6



54018 - Charger, Smart 24VDC

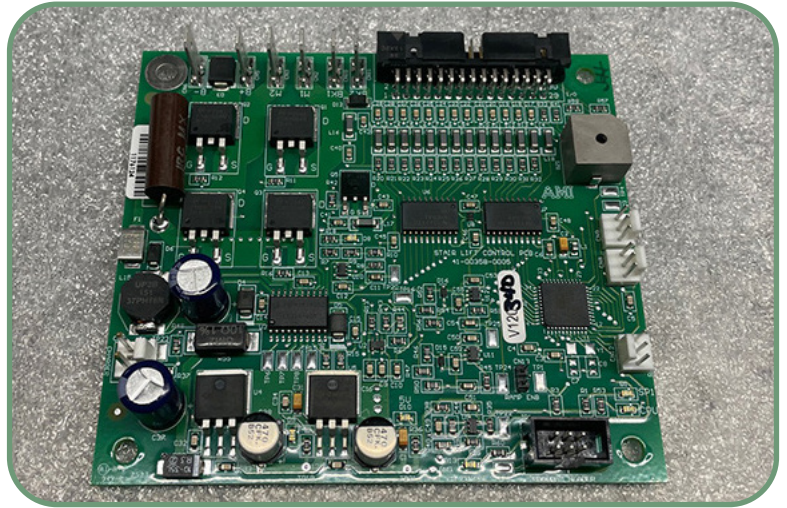

54015 - PCB, AMI Main Control Board

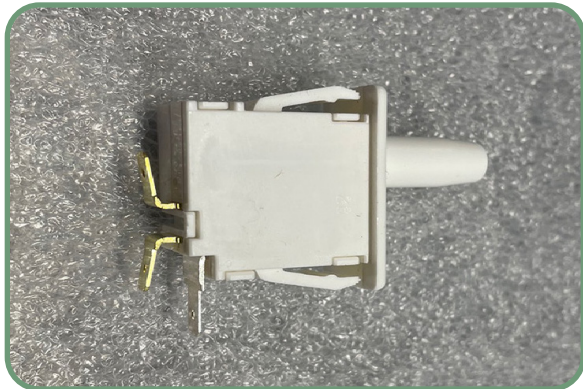

54005 - Switch, Plunger, 1DM1 (up/dn limit)




54011 - Battery, 12V 5AH



74033 - RF Remote Receiver, Gen 2



74034 - RF TX Fob, 2 Button, Gen 2

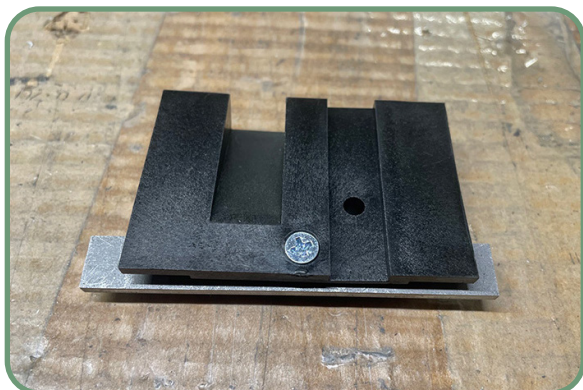

58012 - Assy, Limit Cam




54013 - Switch, Rocker



56005 - Strip, Charge Finger (SL14)



56006 - Strip, Charge Contact (SL14)

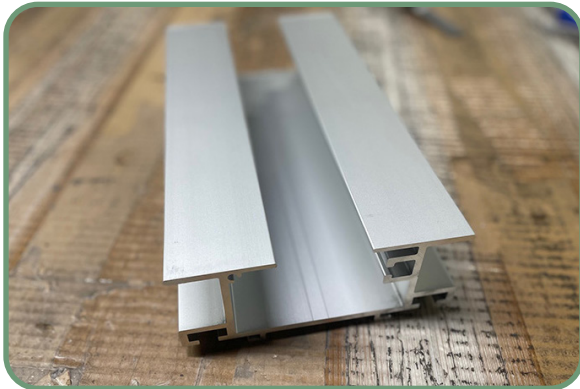

56035 - Track Extrusion (sold per foot)




56038 - Slotted Gear Rack (60" section)




58083 - Assy, Track Splice Bar (2 per splice)




91040 - Pin, Driv-Lok, 187x1.5 (1 per splice)

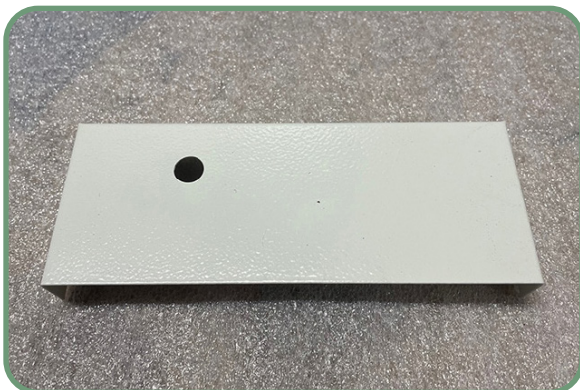

55016 - Cover, Track Top

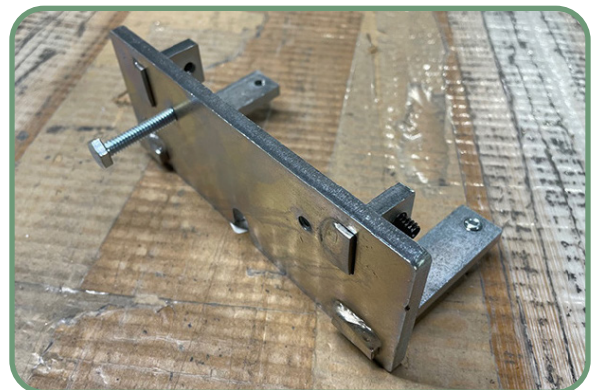

58079 - Assy, Track End Cap SL19

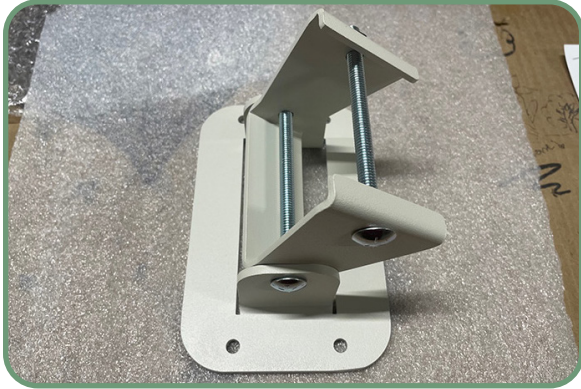


58064 - Assy, Track Bracket




50029 - 14x2.00-WL-HF-ZP (wood lags)



54051 - Hrns, Travel Cable, 15' (prior to 3.1.21)

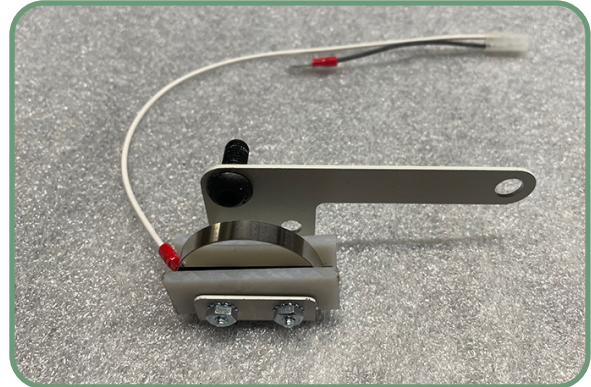

58125 - Assy-Sub, Charge Shoe

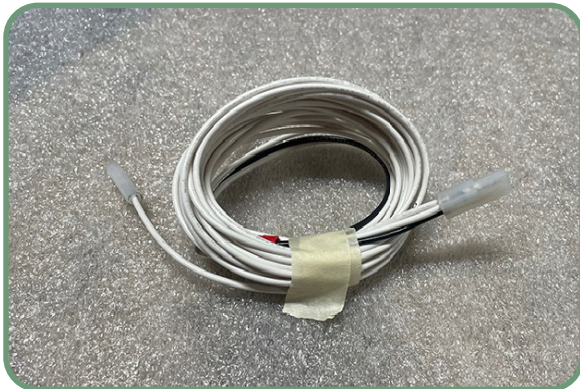

54023 - Harness, Charger




58126 - Charge Strip (specify top/bottom)




56036 - Guide Block




50002 - Guide Block Shims

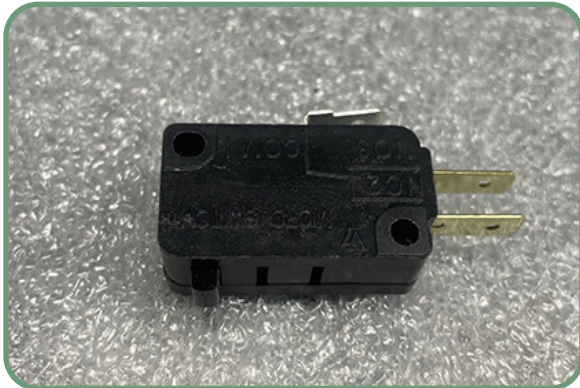


94002 - Switch, No Actuator (overspeed)

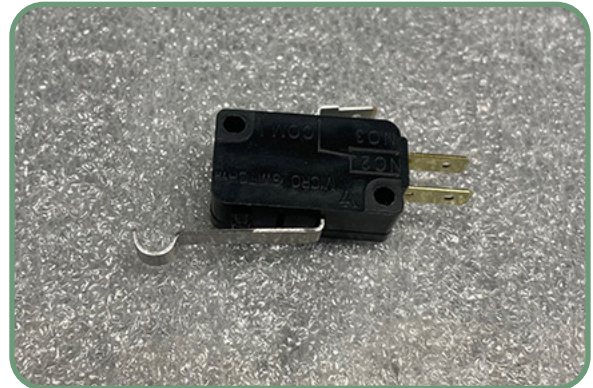

94001 - Switch, Sim Roll (seat swivel, final)

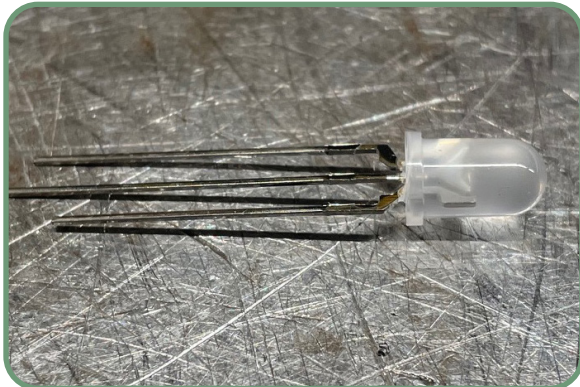

54031 - LED, Diagnostic

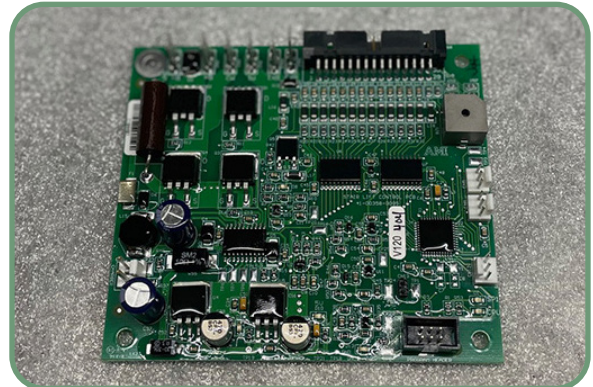

54033 - PCB, Control Board (Outdoor)



56033 - Cover, Stairlift Outdoor Grey



54002 - Circuit Breaker, 15A



58082 - Sub, Motor/Pinion



59051 - Cargo Tray