


VL 19

Spare Parts Photo Book

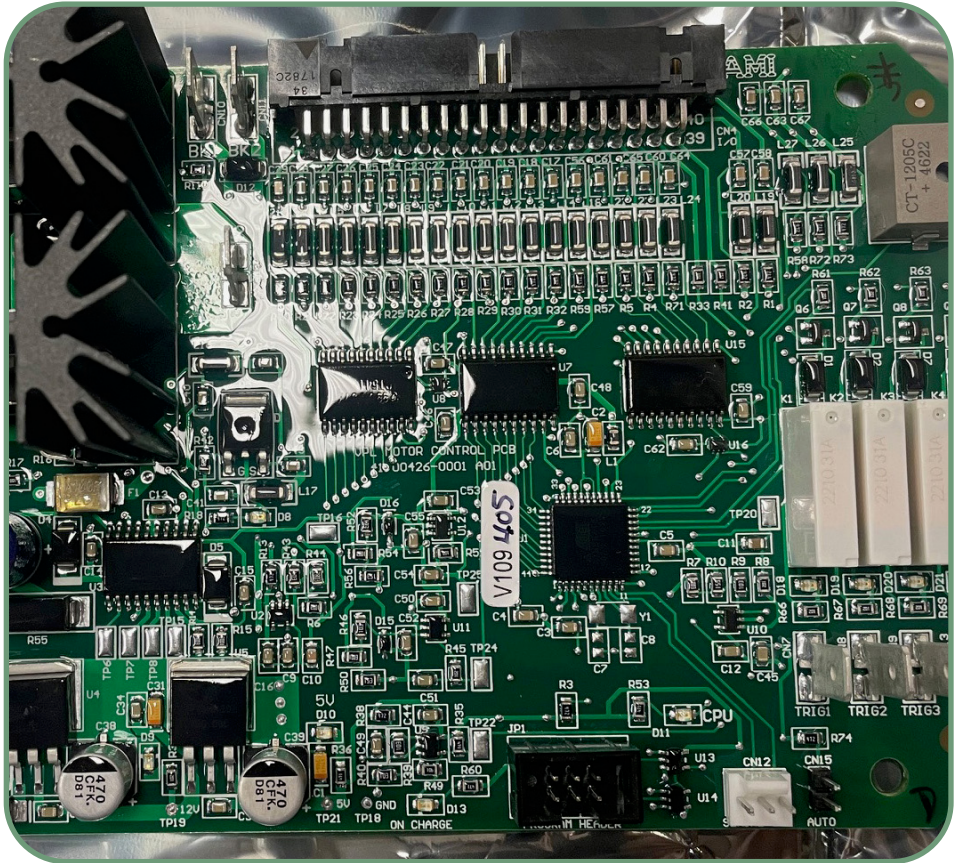

Staying Home Corporation



Table of Contents

74015	- PCB, Control Board	3
74033	- RF Remote Reciever, Gen 2	3
74034	- RF TX Fob, 2 Button, Gen 2.	3
74035	- RF TX PCB (Hall Station).	3
78144	- Assy, 2 Button Hall Station, Gen 2	3
54018	- Charger, Smart 24VDC	3
78147	- Outdoor Hall Station.	3
54013	- Switch, Rocker.	3
94038	- Switch, Keylock 2252	4
74023	- Switch, Long Roller DPDT (Up/Dn limit)	4
94033	- Switch, Man. Reset (slack cable)	4
54005	- Switch, Plunger, 1DM1 (Final Limit/Safety Pan)	4
94039	- Switch, Pushbutton (Up/Dn direction button).	4
94041	- Switch, Emergency Stop.	4
74007	- Cicuit Breaker, 40A	4
74037	- Lock Out Tab for 74007	4
74039	- Hrns, Traveling Cable 2 Stop	5
70012	- Front Panel Screws	5
95171	- Lunar Key	5
98138	- Assy, Install Switch	5
76004	- Assy-Sub, 3/8 Wire Rope 35' (1 rope).	5
94125	- Interlock, LH Honeywell CDI.	5
94126	- Interlock, RH Honeywell CDI.	5
94048	- Battery, 12V 10AH	5




74015 - PCB, Control Board (ver 1.09)




74033 - RF Remote Receiver, Gen 2



74034 - RF TX Fob, 2 Button, Gen 2

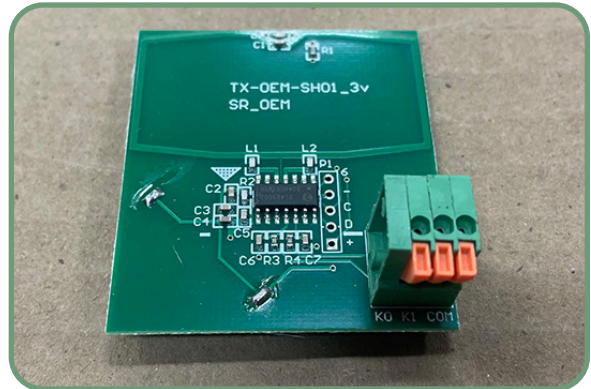

74035 - RF TX PCB (Hall Station)

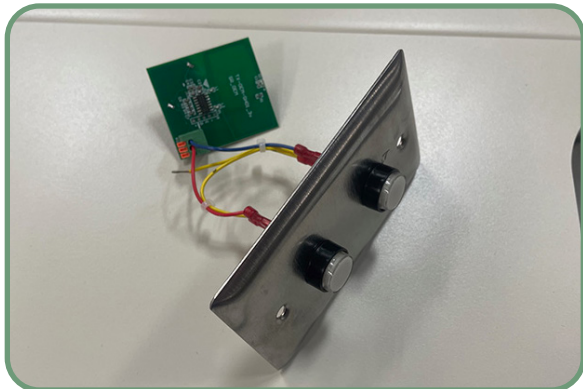


78144 - Assy, 2 Button Hall Station, Gen 2



54018 - Charger, Smart 24VDC



78147 - Outdoor Hall Station

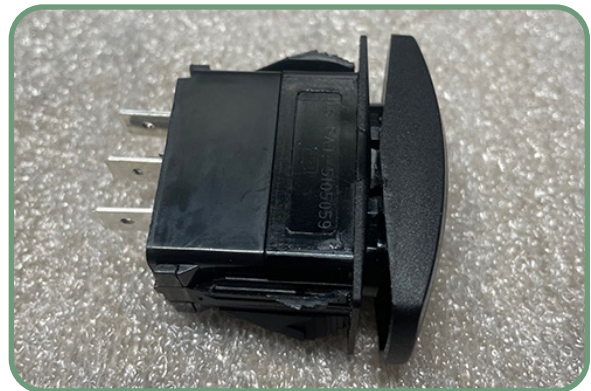

54013 - Switch, Rocker




94038 - Switch, Keylock 2252



74023, Switch, Long Roller DPDT (Up/Dn Limit)




94033 - Switch, Man. Reset (slack cable)

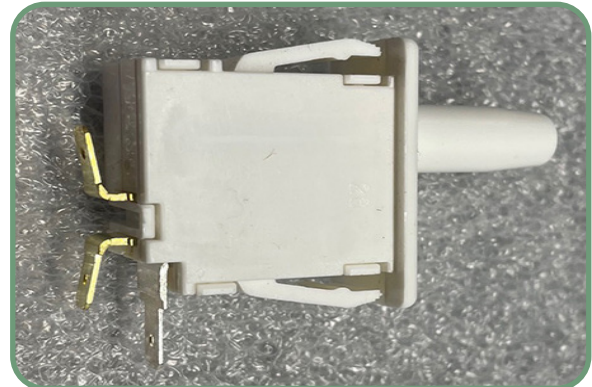

54005 - Switch, Plunger, 1DM1 (Final/Safety Pan)



94039 - Switch, Pushbutton (Up/Dn directional)

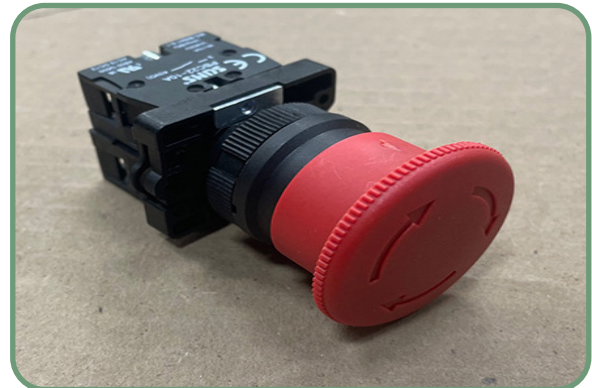

94041 - Switch, Emergency Stop



74007 - Circuit Breaker, 40A



74037 - Lock Out Tab for 74007




74039 - Hrns, Traveling Cable, 2 Stop



70012 - Front Panel Screws



95171 - Lunar Key

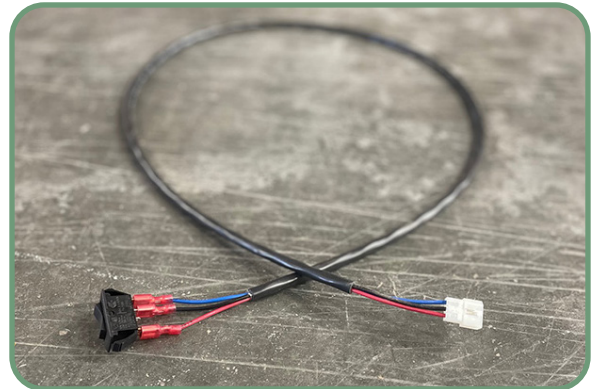

98138 - Assy, Install Switch



76004 - Assy-Sub, 3/8 Wire Rope 35' (1 rope)



94125 - Interlock, LH Honeywell CDI



94126 - Interlock, RH Honeywell CDI



94048 - Battery, 12V 10AH